

2. UPDATING YOUR SAFESCAN DEVICE WITH MICRO SD CARD

2.1 SAFESCAN 155 / 165 COUNTERFEIT DETECTOR

1. Switch off the power of your counterfeit detector.
2. Insert the Micro SD card with the software update into the Micro SD card slot at the back of the device.



3. Press the **[ON/OFF]** and **[MODE]** buttons simultaneously. The detector will enter into update mode, the display will show “- - -”



4. The detector will automatically update the software, this will only take a few seconds. After restarting, a new software version number will be shown in the display. See the *Safescan Software Update Checklist* (pdf file) for more information on software version numbers.